

Outdoor Floodlight Control Instructions


OLC5CFL, OLC5CL

1. Light Control can operate in any position when a typical PAR-38 floodlight or spotlight is used. To install, unscrew bulb from light fixture. Screw light bulb into Light Control and screw unit, with attached bulb, into fixture until securely held. Do not overtighten. Photocell on unit should be exposed to natural light or turned toward daylight. Turn light switch "ON" and leave "ON" continuously. Unit will adapt to present lighting conditions within a few minutes.

⚠ CAUTION: DO NOT EXCEED LAMP WATTAGE USED ON END PRODUCT (LAMP FIXTURE).

Do not use with opaque or frosted glass.

2. **DO NOT INSTALL THE LIGHT CONTROL WITH THE PHOTOCELL FACING ARTIFICIAL OR REFLECTED LIGHT.** This will cause the unit to blink or become dim at night. To correct this, turn the Light Control slightly for better natural light exposure. Do not unscrew more than one turn or electric current will not light bulb. If unit continues to operate improperly, place enclosed plastic hood around photocell and rotate to shield lens from artificial or reflected light. For daytime installation, covering the lens with black tape should light the bulb. For night installation, shining a flashlight at the lens should turn the light off.

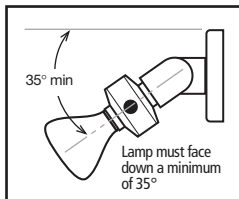

Note: For indoor use, the light fixture should be without a shade and placed so the Light Control photocell opening is facing a window less than 3 feet away. For use with incandescent, halogen and compact fluorescent bulbs 150 Watts or less if bulb is installed pointing up (see diagram on package). Do not use bulb larger than 100 Watts if bulb is installed pointing down. Do not use this control with another light control or dimmer in the same series circuit. Do not use with opaque or frosted glass fixture.

1 Year Limited Warranty

AmerTac™ warrants this product to be free from defects in material and workmanship for a period of 1 year from the date of purchase. AmerTac's obligations are limited to repairing or replacing any defective units and are effective only if such units are returned within 1 year of the purchase date, to AmerTac, 250 Boulder Drive, Breinigsville, PA 18031. Warranty void if damage is due to accident, negligence, misuse, alteration or improper installation. In no circumstance will AmerTac be liable for consequential or incidental damages relating in any way to this product.

Questions, ¿Preguntas?, La question? 1-800-777-0802

©2009 AmerTac™
250 Boulder Drive
Breinigsville, PA 18031
www.amertac.com

Made in China
Hecho en China / Fabriqué en Chine
109-0050-A IN

Dry or Damp Locations Only Not for Wet Location Use

120~V, 60Hz
150 Watts Max - Incandescent
75 Watts Max - Halogen
23 Watts Max - CFL bulb

Certified to
CSA C22.2 No. 43-08

Conforms to
ULSTD 49L

