 


Outdoor Swivel Mount Light Control Instructions

SW103C, SW103CT

- DISCONNECT POWER TO BRANCH CIRCUIT. Remove junction box cover. place Light Control in knockout hole and fasten with locknut. Wire according to diagram. Replace cover and turn power "ON". DO NOT INSTALL THE LIGHT CONTROL WITH THE PHOTOCELL FACING LIGHT ARTIFICIAL OR REFLECTED LIGHT. This will cause the unit to cycle on and off at CONTROL night (see Problem Solving).
- It is normal for switch to take several minutes to turn off when first installed. To test "turn on function" during day, cover eye with black tape or other opaque material. Do not cover with finger because light traveling through finger may be great enough to keep switch open. Test will take approximately 2 minutes.



3. Check the following before you replace an inoperative Light Control.

PROBLEM SOLVING:

Light staving on during

daytime.

Light coming on too early or going off too late.

Light cycling on and off during the day. Light cycling on and

off at night.

Light not coming on at night or turning on too late.

SOLUTION:

Check that wiring connections are correct. Make sure eye is receiving light and is not being shielded by overhang or mounted facing the ground. Occasionally lightning or severe line voltage surges may damage photoelectric switch.

Same as above.

The red and black wires are wired incorrectly and should be reversed.

Light is being reflected into eye. It is essential that you shield or

reposition switch to eliminate this condition.

The switch may be held off by external light source. Shielding or repositioning is necessary.

Operation is not affected by weather, moisture or temperature changes.

NOTE: This product can be used with incandescent, fluorescent, mercury vapor and sodium bulbs.

1 Year Limited Warranty

AmerTac[™] warrants this product to be free from defects in material and workmanship for a period of 1 year from the date of purchase. AmerTac's obligations are limited to repairing or replacing any defective units and are effective only if such units are returned within 1 year of the purchase date, to AmerTac, 250 Boulder Drive, Breinigsville, PA 18031. Warranty void if damage is due to accident, negligence, misuse, alteration or improper installation. In no circumstance will AmerTac be liable for consequential or incidental damages relating in any way to this product.

Questions, ¿Preguntas?, La question? 1-800-777-0802

©2007 AmerTacTM 250 Boulder Drive Breinigsville, PA 18031 www.amertac.com



