

Indoor

1-Outlet Mechanical Timer

Instruction Manual & Warranty

Before Programming

Using your finger, pen or screwdriver, pull up all the gray Pins around the outer edge of the Timer Dial.

Setting Automatic ON/OFF Positions

Each Pin represents 30 minutes. Press down the Pins that correspond to the time(s) you want your lamp/device to be ON. Make sure to push down ALL of the Pins between your desired ON and OFF times (see illustration). Please note that your Timer can be programmed to as many as 48 ON/OFF times in a 24 hour period depending on what Pins you select.

Setting Time

Grasping the Pin Ring that surrounds the Timer Dial, turn the Ring clockwise until the triangular "TIME" Pointer is pointing to the current time of day (see photo).

Turn Timer to On Position

Be sure Switch on top of timer is set to "TIMER ON" position.

Using Your Timer

Once desired ON/OFF time(s) and time of day are set, plug your lamp/device into the Timer and plug the Timer into a wall outlet. Be sure wall outlet has power, your lamp/device is turned on and Timer is switched to the "TIMER ON" position. Timer will start to operate, turning lamp/device ON/OFF as you have programmed it to.

Manual ON/OFF

Your programmed ON/OFF time(s) can be manually over-ridden by moving the Switch at the top of the Timer to the "OUTLET ON" position. In this position, your lamp/device will remain ON permanently. To resume your programmed ON/OFF time(s), simply slide the switch back to the "TIMER ON" position.


RATINGS:

125V~, 60Hz
15A, 1875W Resistive
10A, 1250W Tungsten
1/2HP

Notes:

In the event of a power failure, reset the current time of day as described in "Setting Time" section. On/off times previously set will not change.

Do not plug in more than rated load (see electrical ratings on back of Timer or package). For lamps that contain more than one bulb, add up watts of each bulb to make sure you are not exceeding the maximum wattage of the Timer. See ratings below, on the product or on the back of the package.

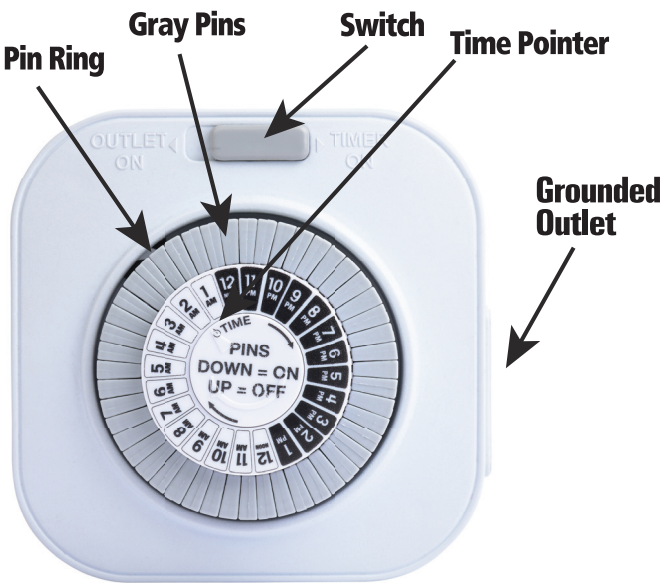

PRECAUTIONS:

- For indoor use only.
- Do not use with any device which exceeds capacity of timer.
- Always ensure that device plug is fully inserted into timer.
- If timer needs cleaning, unplug and wipe with a dry cloth.
- Do not immerse in water or any liquid.
- This timer is equipped with one grounded outlet. Match wide blade of light/decoration plug to wide slot on timer, fully insert.

FAN HEATERS AND HEATERS WITH EXPOSED ELEMENTS SHOULD NOT BE CONNECTED TO TIMERS.

One-Year Limited Warranty

AmerTac warrants to the original purchaser that this product will be free from defects in materials and workmanship for a period of one year from the date of purchase. Additional details are available at www.amertac.com. Prop. 65 Warning: This product contains chemicals known to the State of California to cause cancer and/or birth defects or other reproductive harm.

Garantie limitée de 1 an

AmerTac garantit à l'acheteur initial que, dans des conditions normales d'utilisation, ce produit sera exempt de défaut de matériaux et de fabrication pendant une période de 1 an à compter de la date d'achat. Des détails supplémentaires sont disponibles sur le site www.amertac.com.

Garantía Limitada de 1 Año

AmerTac le garantiza al comprador original que este producto estará libre de defectos en materiales y mano de obra por un período de 1 año a partir de la fecha de compra. Detalles adicionales disponibles a través de www.amertac.com.