


INSTALLATION INSTRUCTIONS

57300

Decorator Rocker Slide Dimmer
Single Pole / 3-Way

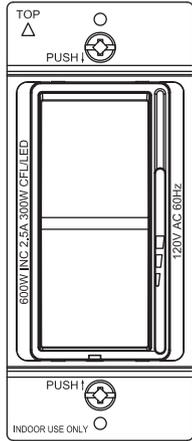

SPECIFICATIONS

Voltage	120VAC, 60Hz
Incandescent/ Halogen.....	600W
Dimmable LED and CFL.....	300W
Operating Temperature.....	32°F-104°F

DESCRIPTION/ FEATURES

This dimmer switch is compatible with up to 300-Watt of dimmable LED/CFL bulbs or 600-Watt of incandescent/halogen bulbs, enabling you to control multiple types of bulbs on the same circuit. It is specifically designed to work with a wide range of dimmable LED and CFL bulbs from various brands. The switch incorporates a paddle switch that can be used to turn the lights on or off, instantly returning them to your preferred brightness level. Additionally, the switch features a slide control adjacent to the switch, providing the ability to fine-tune the lighting level for any desired activity.

- Large decorator rocker on/off switch
- Slide up to on/brighten and down to dim
- Programmed Trim setting for light level adjustment
- Designed for single pole / 3-Way

WARNING

Turn off the power at the circuit breaker before installing the dimmer.


Please read and understand these instructions before proceeding with the installation. This device is designed for installation in accordance with the National Electric Code and local regulations. We recommend that a qualified electrician performs the installation. Ensure that the circuit breaker or fuse(s) are turned off and power is disconnected before wiring the device.

Use copper wire only


WIRING DIRECTIONS

1. Turn off the power to the circuit by switching off the corresponding circuit breaker.
2. Remove the old switch from the electrical box.
3. Identify the wiring and understand the configuration.
4. Connect the dimmer switch following the appropriate wiring connections.
5. Attach the dimmer switch securely to the electrical box.
6. Install the wall plate cover over the dimmer switch.
7. Turn on the power by switching on the circuit breaker.


Single-Pole Wiring

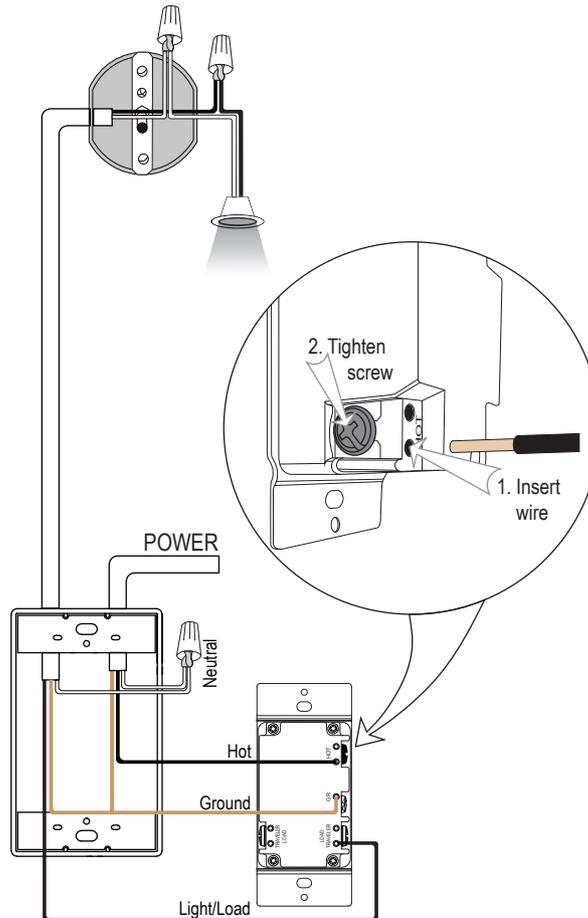

3-Way Wiring

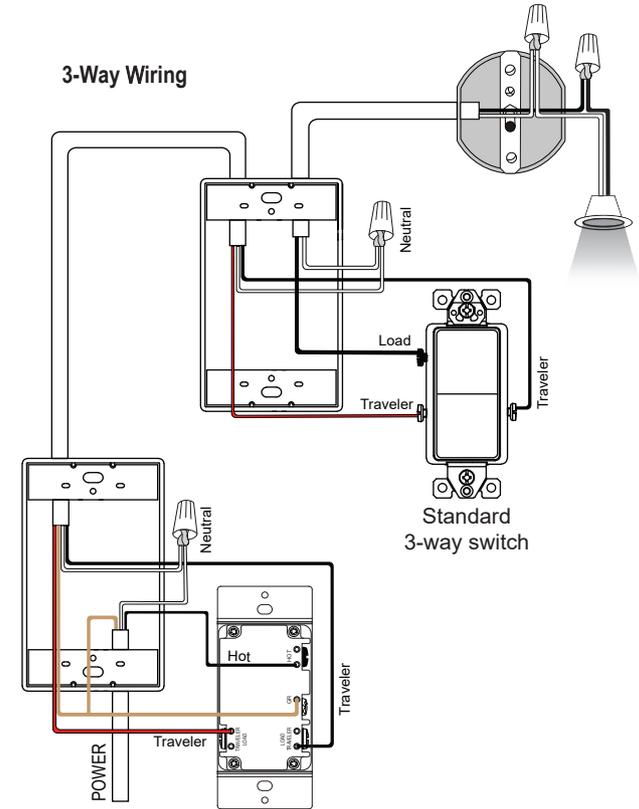


OPERATING INSTRUCTIONS

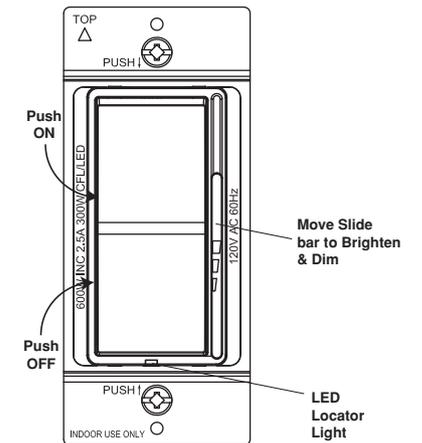

REMOVING THE FACE COVER


Push up at the bottom of the face cover and pull forward to release.

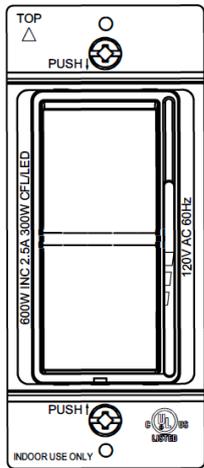

PROGRAMMING

Setting Minimum Light Level and LED indicator

- 1) Remove the face cover.
- 2) Turn off the dimmer.
- 3) Switch mode to "S."
- 4) Turn on the dimmer.
- 5) Set the desired minimum light level by moving the slide bar to the bottom.
- 6) Switch mode to "C" for CFL or "L" for LED/Inc.
- 7) LED indicator switch to off if desired.
- 8) Install the face cover.

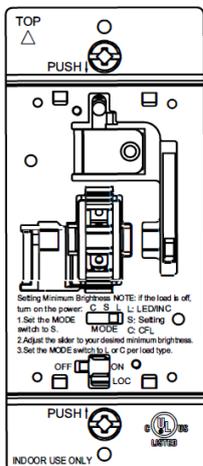

TROUBLESHOOTING

- Lights do not turn ON immediately
 - Programming required
- Lights flickering
 - Bulb has bad connection.
 - Wires not secured firmly with wire connectors.
 - If flickering occurs during startup, move the Mode Selector Switch to Mode L.
- LED flicker or dead travel at low end of dimming range
 - Increase the low end of the dimming range through the use of the minimum programming mode.
- LED flicker or dead travel at the high end of the dimming range
 - Decrease the high end of the dimming range through the use of the maximum programming mode.
- CFL or LED bulb flickers throughout dimming range.
 - Ensure the bulbs are marked dimmable
- Light does not turn ON
 - Circuit breaker or fuse has tripped.
 - Bulb is burned out.
 - Bulb Neutral connection is not wired.
- LED bulb(s) remains ON or glow when dimmer is OFF
 - Turn the Locator Light Switch to the OFF position.

WARRANTY INFORMATION

This device is warranted to be free of material and workmanship defects for 2 years from the date of purchase. Original receipt or proof of purchase from an authorized retailer must be presented upon warranty claim. ALL claims must be verified and approved by Enerlites, Inc. Warranties from other Enerlites products may vary. This warranty is nontransferable and does not cover normal wear and tear or any malfunction, failure, or defect resulting from misuse, abuse, neglect, alteration, modification, or improper installation. To the fullest extent permitted by the applicable state law, Enerlites shall not be liable to the purchaser or end user customer of Enerlites products for direct, indirect, incidental, or consequential damages even if Enerlites has been advised of the possibility of such damages. Enerlites' total liability under this or any other warranty, express or implied, is limited to repair, replacement or refund. Repair, replacement or refund are the sole and exclusive remedies for breach of warranty or any other legal theory.