 



Using Occupancy Sensing Switch with Maestro® Companion Switch

Lutron® Occupancy & Vacancy motion sensors are passive infrared (PIR) sensors that automatically control lights. These sensors detect the heat from occupants moving within an area to determine when the space is occupied. The sensors then control the lights automatically turning them off or on, providing convenience and increased energy savings.

- 1** **⚠ WARNING!** Shock Hazard. May result in serious injury or death. Turn off power at circuit breaker before installing the unit.




- 2** Remove wallplate and switch mounting screws. Carefully remove switch from wall leaving all wires attached.

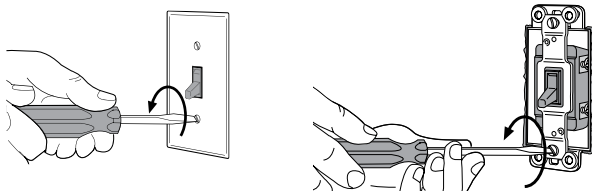


- 3** Identify switch type (Single pole, 3-way or 4-way) and tag the COMMON terminal.


- 3A Single pole (One location)** – Switch will have insulated wires connected to two screws of the same color plus a green ground screw. *See Diagram A*

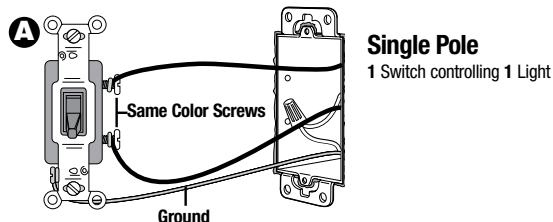


- 3B 3-way (Two locations)**– 3-way switches will have insulated wires connected to three screws plus a green ground screw. One of these wires is connected to a screw of a different color (not green) or labeled COMMON. Tag this wire on both switches to identify when removing. *See Diagram B*

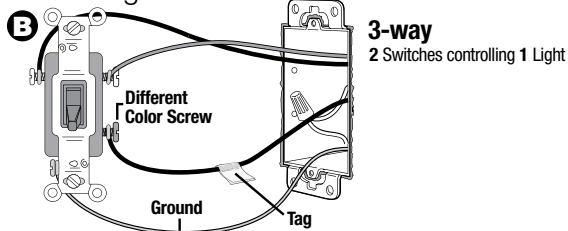

- 3c 4-way (Three or more locations)** – 4-way switches will have insulated wires connected to four screws plus a green ground screw. Tag either set of two same-color insulated wires that are connected to different-colored screws (on the same side of the switch). Follow this procedure for each 4-way switch. **See Diagram ③**

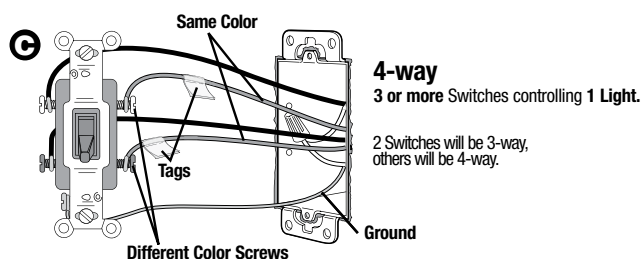

- 4** Disconnect wires from the switches removed in step 2. The switches may have two wires attached to the same screw. Tape these two wires together before disconnecting.


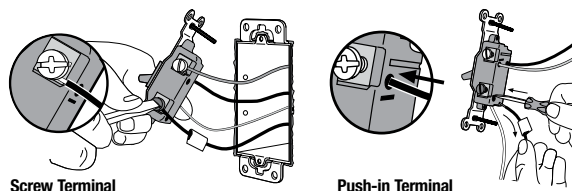


5 Connect Occupancy Sensing Switch and Companion Switches



- 5A Single pole (One location)** - Existing switch will be replaced with an Occupancy Sensing Switch.

- For models without a neutral (white) wire, (OPS5M, VPS5M, OPS6M2-DV, and VPS6M2-DV) Connect green and bare ground wire on Occupancy Sensing Switch to bare copper or green wire in wallbox.
- For models with a neutral (white) wire, (OPS6M2N-DV, VPS6M2N-DV) Connect bare ground wire on Occupancy Sensing Switch to bare copper or green wire in wallbox.
- Connect white wire on Occupancy Sensing Switch to white wire (neutral) in wallbox (OPS6M2N-DV, VPS6M2N-DV)
- Connect one of the remaining wires removed from switch to black wire on Occupancy Sensing Switch.
- Connect remaining wire removed from switch to the other black wire on Occupancy Sensing Switch.
- Blue wire is not used in a single-pole circuit. Cap blue wire.

-OPS5M, -VPS5M, -OPS6M2-DV, and -VPS6M2-DV

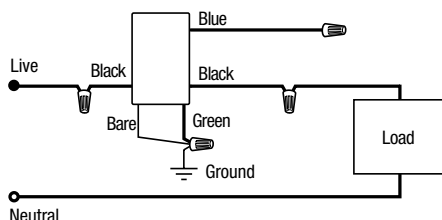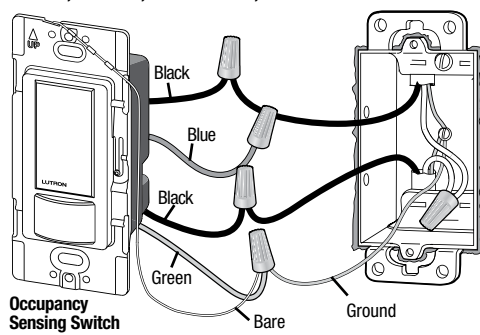

-OPS6M2N-DV, and -VPS6M2N-DV

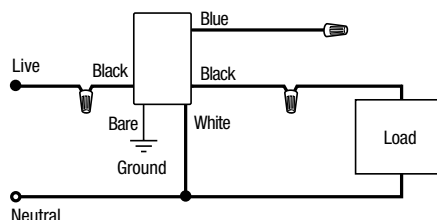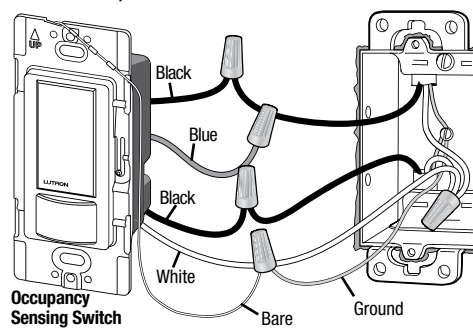

5B 3-way (Two locations)


NOTE: 120 V~ circuits use MA-AS/MS-AS Companion Switches

240/277 V~ circuits use MA-AS-277/MS-AS-277 Companion Switches


Wire the Occupancy Sensing Switch

- For models without a neutral (white) wire, (OPS5M, VPS5M, OPS6M2-DV, and VPS6M2-DV) Connect green and bare ground wire on Occupancy Sensing Switch to bare copper or green wire in wallbox.
- For models with a neutral (white) wire, (OPS6M2N-DV, VPS6M2N-DV) Connect bare ground wire on Occupancy Sensing Switch to bare copper or green wire in wallbox.
- Connect white wire on Occupancy Sensing Switch to white wire (neutral) in wallbox (OPS6M2N-DV, VPS6M2N-DV)
- Connect tagged wire removed from switch to one of the black wires on Occupancy Sensing Switch.
- Connect one of the remaining wires removed from switch to the other black wire on Occupancy Sensing Switch.
- Connect remaining wire removed from switch (note color) to blue wire on Occupancy Sensing Switch.


-OPS5M, -VPS5M, -OPS6M2-DV, and -VPS6M2-DV

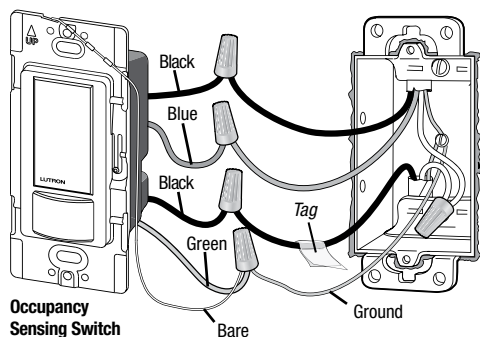

-OPS6M2N-DV, and -VPS6M2N-DV

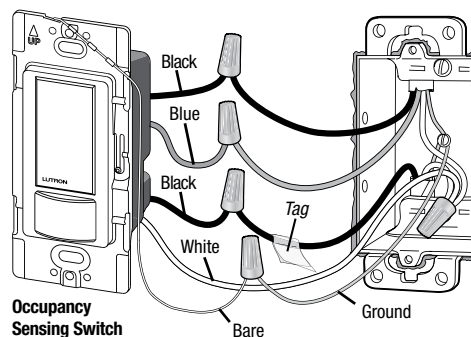
**Wire the Companion Switch**

- Connect green ground wire on Companion Switch to bare copper or green wire in wallbox.
- Connect tagged wire removed from switch to black screw terminal on Companion Switch.
- Connect the same color wire connected to the blue wire on Occupancy Sensing Switch (color noted above) to the blue screw terminal on Companion Switch.
- Connect remaining wire removed from switch to brass screw terminal on Companion Switch.

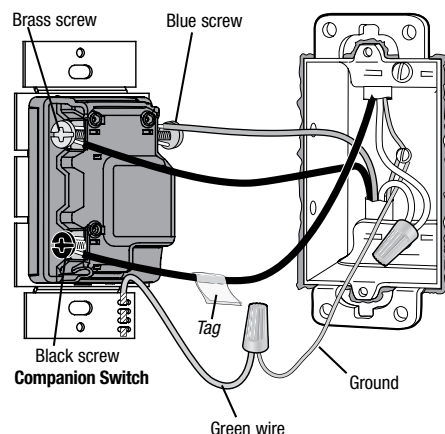


See wiring diagrams on next page.


5B Wiring Diagrams

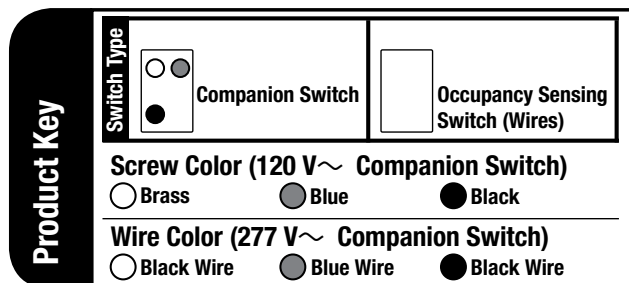


-OPS5M, -VPS5M, -OPS6M2-DV, and -VPS6M2-DV

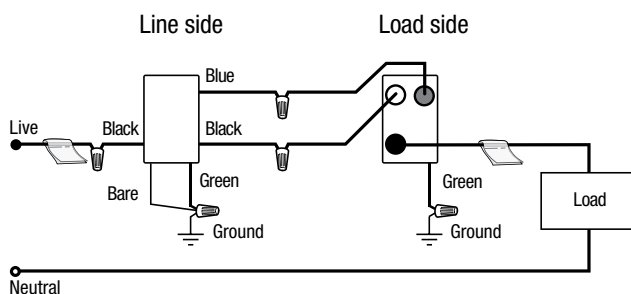


OR

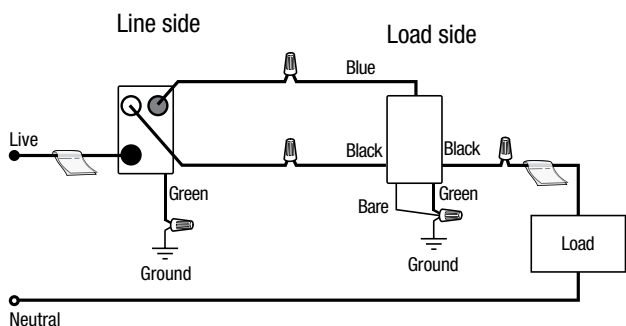

-OPS6M2N-DV, and -VPS6M2N-DV

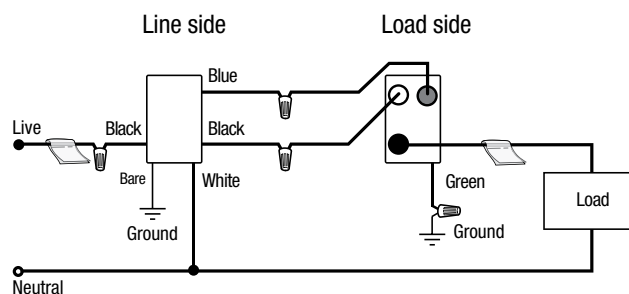

OR

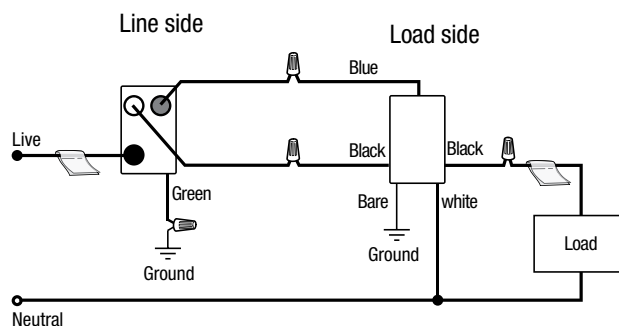



NOTE: Maximum wire length between the Occupancy Sensing Switch and the Companion Switch (Total blue terminal wire length) is 150 ft (46 m).

5c 4-way (Three or more locations)

NOTE: The Occupancy Sensing Switch can be installed in any of the locations (choose the location where the sensor will have optimal coverage of the space). The occupancy sensing switch and/or companion switches can replace a 4-way switch or 3-way switch (4-way applications typically include both 4-way and 3-way switches).


Wire the Occupancy Sensing Switch replacing a 4-way switch

- For models without a neutral (white) wire, (OPS5M, VPS5M, OPS6M2-DV, and VPS6M2-DV) Connect green and bare ground wire on Occupancy Sensing Switch to bare copper or green wire in wallbox.
- For models with a neutral (white) wire, (OPS6M2N-DV, VPS6M2N-DV) Connect bare ground wire on Occupancy Sensing Switch to bare copper or green wire in wallbox.
- Connect white wire on Occupancy Sensing Switch to white wire (neutral) in wallbox (OPS6M2N-DV, VPS6M2N-DV)
- Connect both tagged wires (note color) removed from 4-way switch to blue wire on Occupancy Sensing Switch.
- Connect one of the remaining wires removed from switch to one of the black wires on Occupancy Sensing Switch.
- Connect remaining wire removed from switch to other black wire on Occupancy Sensing Switch.

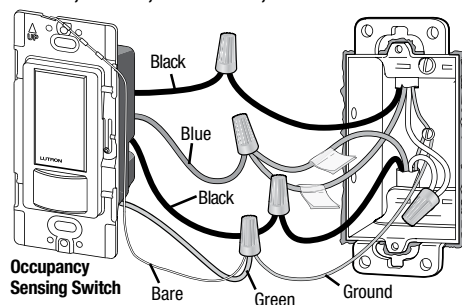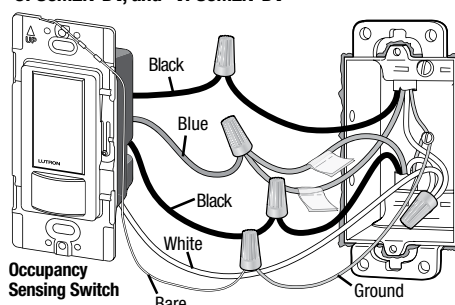-OPS5M, -VPS5M, -OPS6M2-DV, and -VPS6M2-DV**-OPS6M2N-DV, and -VPS6M2N-DV****Wire the Companion Switch replacing a 4-way switch**

- Connect green wire on Companion Switch to bare copper or green wire in wallbox.
- Connect both tagged wires (note wire color) removed from 4-way switch to blue screw terminal on Companion Switch (one wire to screw terminal the other to push-in terminal).
- Connect one of the remaining wires removed from switch to black screw terminal on Companion Switch.
- Connect remaining wire removed from switch to brass screw terminal on Companion Switch.



NOTE: Repeat for each Companion Switch replacing a 4-way switch.

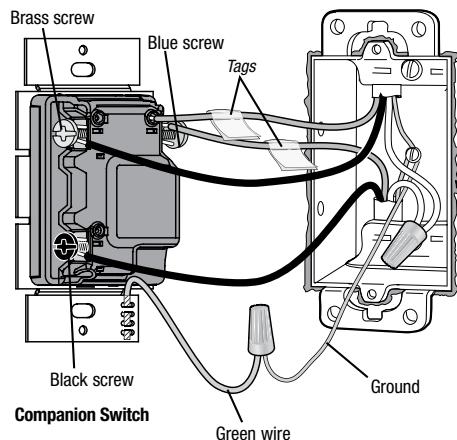

See wiring diagrams on page 7.


5c 4-way (Three or more location control)**Wire the Occupancy Sensing Switch replacing a 3-way switch**

- For models without a neutral (white) wire, (OPS5M, VPS5M, OPS6M2-DV, and VPS6M2-DV) Connect green and bare ground wire on Occupancy Sensing Switch to bare copper or green wire in wallbox.
- For models with a neutral (white) wire, (OPS6M2N-DV, VPS6M2N-DV) Connect bare ground wire on Occupancy Sensing Switch to bare copper or green wire in wallbox.
- Connect white wire on Occupancy Sensing Switch to white wire (neutral) in wallbox (OPS6M2N-DV, VPS6M2N-DV)
- Connect tagged wire removed from switch to one of the black wires on Occupancy Sensing Switch.
- Connect same color wire connected to blue screw terminal on Companion Switch that replaced 4-way switch (color noted above) to blue wire on Occupancy Sensor Switch.
- Connect remaining wire removed from switch to the other Black wire on Occupancy Sensing Switch.

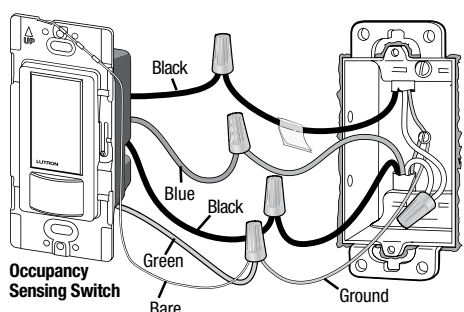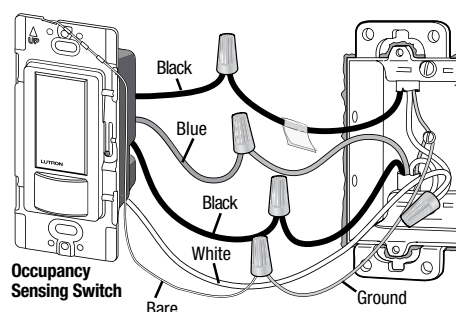-OPS5M, -VPS5M, -OPS6M2-DV, and -VPS6M2-DV**-OPS6M2N-DV, and -VPS6M2N-DV****Wire the Companion Switch(es) replacing a 3-way switch**


- Connect green ground wire on Companion Switch to bare copper or green wire in wallbox.
- Connect tagged wire removed from switch to the black screw terminal on Companion Switch.
- Connect same color wire connected to blue wire on Occupancy Sensor Switch that replaced 4-way switch (color noted above) to blue screw terminal on Companion Switch.
- Connect remaining wire removed from switch to the brass screw terminal on Companion Switch.
(See *Instructions that came with Companion Switch* for more information)

NOTE: Repeat for each Companion Switch replacing a 3-way switch.

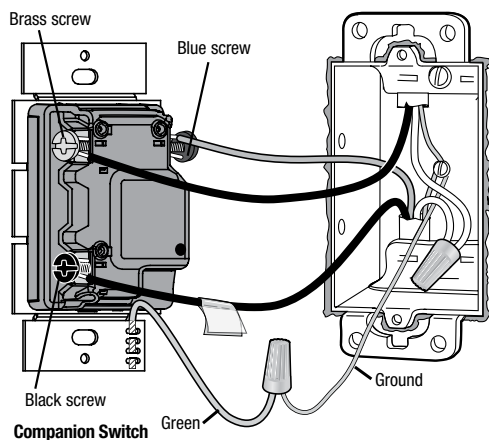


See wiring diagrams on next page.


5c Wiring Diagrams

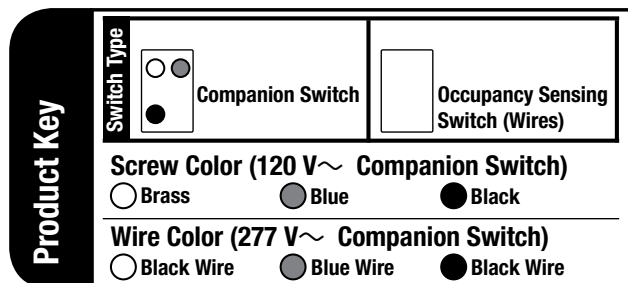


-OPS5M, -VPS5M, -OPS6M2-DV, and -VPS6M2-DV

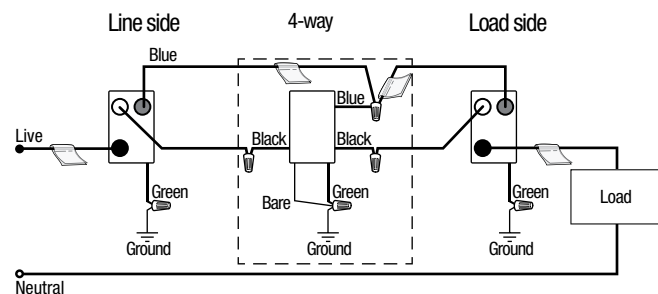


OR

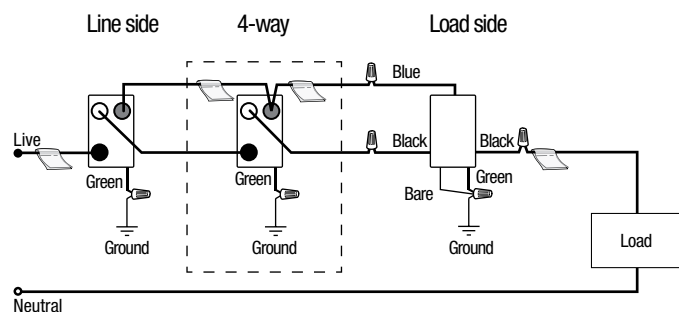


OR

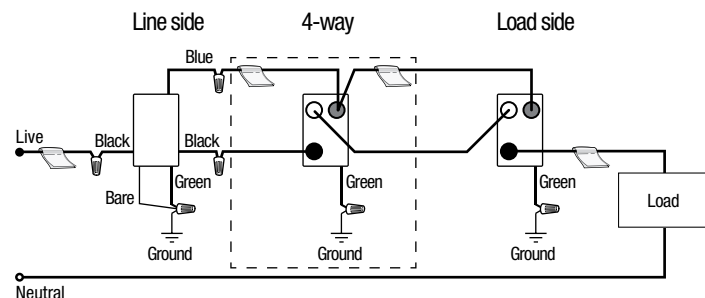


-OPS6M2N-DV, and -VPS6M2N-DV

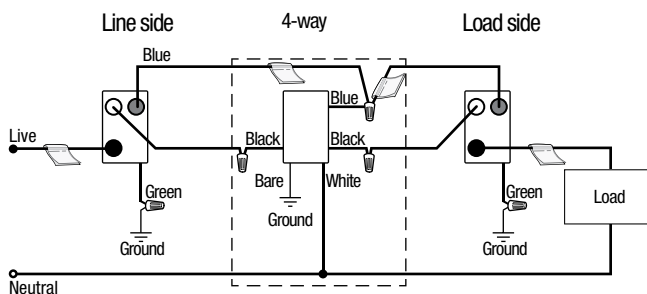

OR

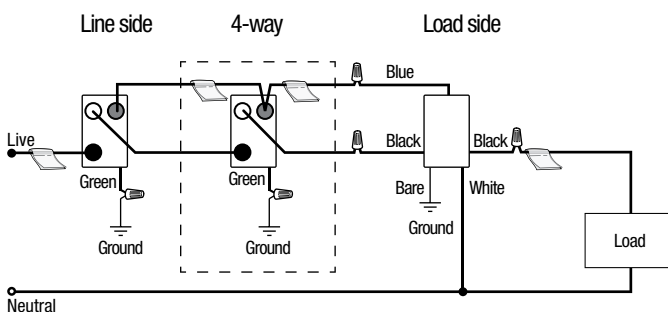


OR

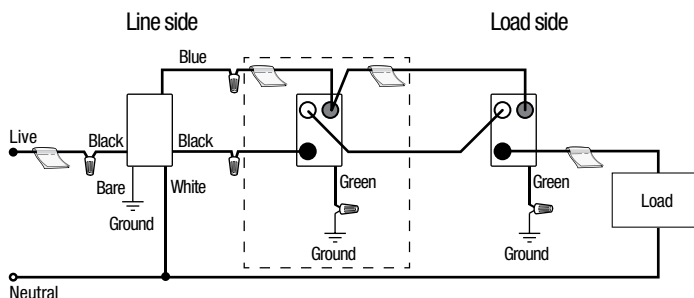


NOTE: Maximum wire length between the Occupancy Sensing Switch and the Companion Switch (total blue terminal wire length) is 150 ft (46 m).

- 6** Push wires carefully into wallbox and install Occupancy Sensing Switch and all Companion Switches. Leave wall plate off Occupancy Sensing Switch if custom settings are desired. See Occupancy Sensing Switch installation instructions for details on custom settings.

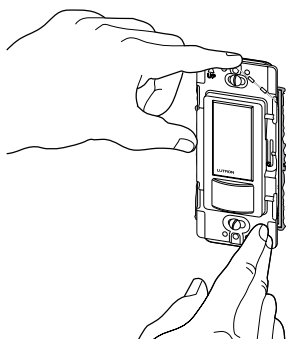

- 7** Turn power On at circuit breaker.

NOTE: Once power has been restored, the Occupancy Sensing Switch can be manually turned on or off after 30 seconds but will not automatically control the load for the first 2 minutes.

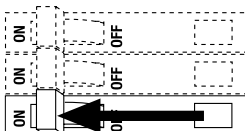

Lutron and Maestro are registered trademarks of Lutron Electronics Co., Inc. © 2012 Lutron Electronics Co., Inc.

Lutron Contact Numbers

WORLD HEADQUARTERS USA

Lutron Electronics Co., Inc.
7200 Suter Road
Coopersburg, PA 18036-1299
TEL: +1.610.282.3800
FAX: +1.610.282.1243
Toll-Free: 1.888.LUTRON1
Technical Support: 1.800.523.9466
product@lutron.com

North & South America Technical Hotlines

USA, Canada, Caribbean:
1.800.523.9466
Mexico:
+1.888.235.2910
Central/South America:
+1.610.282.6701

EUROPEAN HEADQUARTERS United Kingdom

Lutron EA Ltd.
6 Sovereign Close
London, E1W 3JF United Kingdom
TEL: +44.(0)20.7702.0657
FAX: +44.(0)20.7480.6899
FREEPHONE (UK): 0800.282.107
Technical Support: +44.
(0)20.7680.4481
lutronlondon@lutron.com

ASIAN HEADQUARTERS Singapore

Lutron GL Ltd.
15 Hoe Chiang Road
#07-03, Tower 15
Singapore 089316
TEL: +65.6220.4666
FAX: +65.6220.4333
Technical Support: 800.120.4491
lutronsea@lutron.com

Asia Technical Hotlines

Northern China: 10.800.712.1536
Southern China: 10.800.120.1536
Hong Kong: 800.901.849
Indonesia: 001.803.011.3994
Japan: +81.3.5575.8411
Macau: 0800.401
Taiwan: 00.801.137.737
Thailand: 001.800.120.665853
Other Countries: +65.6220.4666