

SATE Y WARNINGS IMPORTANT SAFETY INFORMATION

Risk of shock. Disconnenct power before installation.

DANGER - Risque de choc - Couper l'alimentation avant l'installation

NARY ROOM

dimming ballast ated with fluorescent electronic ballast, emergency ballast and LED T8 lamp for use only with products described and installed in accordance with product specifications. LED T8 lamp to be operated

NARAL OF

Risk of fire. Use only in place of fluorescent lamps specified on label.

S PRZZG

Risk of electric shock. SUITABLE FOR DRY AND DAMP LOCATIONS

NOTES Input Voltage: Determined by fluorescent ballast

procedures of removed ballast and lamps Consult your local authority regarding disposal or recycling

Consultez www.unvlt.com pour une liste de ballasts compatibles Consult www.unvlt.com for a list of compatible ballasts.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1)this device may not cause harmful interference, and (2)this device must accept any interference received, including interference that may cause undesired operation.

DIRECT REPLACEMENT

LED T8 LAMP SERIE LIT#LILEDT0615

DO NOT INSTALL THIS LAMP IN A PRE-HEAT LUMINAIRE

N'INSTALLEZ PAS CETTE LAMPE DANS UN APPAREIL

MANUFACTURER OR QUALIFIED ELECTRICIAN REMOVE LAMP FROM LUMINAIRE AND CONTACT LAMP LAMP DOES NOT LIGHT WHEN THE LUMINAIRE IS ENERGIZED THIS LAMP ONLY OPERATES ON ELECTRONIC BALLASTS

L'APPAREIL D'ECLAIRAGE ACTIVE, ENLEVEZ LA LAMPE DE L'APPAREIL D'ECLAIRAGE ET CONTACTEZ LE FABRICANT DE LAMPE OU UN ELECTRICIEN QUALIFIE. ELECTRONIQUE, SILA LAMPE NE S'ALLUME PAS QUAND CETTE LAWPE OPERE SEULEMENT AVECLE BALLAST

CAUTION RISK OF FIRE - IF THE LAMP OR LUMINAIRE EXHIBITS LUMINAIRE AND CONTACT MANUFACTURER. UNDESIRABLE OPERATION (BUZZING, FLICKERING,ETC.), MMEDIATELY TURN OFF POWER, REMOVE LAMP FROM

EVICENCE OF VALUE OF TANGON OF THE TANGEN OF THE ALORS COUPER IMMÉDIATEMENT LE COURANT ET ENLÉVER LA LAMPE DE L'APPAREIL D'ÉCLAIRAGE LUMINAIRE MONTRE DES SIGNES D'OPERATION INDESIRABLE (BRUIT, VIBRATION, CLIGNOTEMENT, ETC.),

NOLWINE AND A SEVE

- 1. Check the lamp before installation, if there is any damage caused during transportation, do not install
- 2. Maintenance should be carried out by technical personnel only.
- ω Do not stare at the light source with bare eyes for a long time or beam to others's eyes.
- 4. Do not place any objects on the lamp

- 1. Disconnect lamp from power supply before any maintenance
- 2. Clean luminaire with dry cloth.
- . Do not clean the lamp with corrosive chemicals

ώ

- 5. Keep the lamp away from flame or high temperature objects
- Only for indoor use
- 7. Only replace with same type of LED tube! Risk of electrical
- 8. If the glass lamp tube is broken, the lamp must be disposed immediately!
- 4. FOR EMERGENCY LIGHTING WHEN ONLY WITH Ballast Listed (FTBR/7), PHILIPS EMERGENCY LIGHTING (E493: Model B50 (Alternate RS), Rated 120/277V, 50/60Hz, Dami Location Fluorescent Emergency Ballast.



 


DIRECT REPLACEMENT

LED T8 LAMP SERIES

INSTALLATION


NOTE: Compliance with instructions and notes is required to ensure that the product is operated in a safe condition.




Step 1: Make Sure Power is OFF.

Step 2: Remove lens or diffuser (if applicable)

 Step 3: Remove existing fluorescent lamps from the luminaire. See Figure 1 & 2.



 Step 4: Bring LED lamp to luminaire and insert lamp pins into luminaire lamp holders. See Figure 3.



Step 5: Rotate LED lamp until lamp locks in place.
Ensure that the LED lamp front points away from the back of the luminaire. See Figure 4.

NOTE: install LED T8 replacement lamp one for each fluorescent lamp removed.

Step 6: Place lens or diffuser back in place (if applicable)

Step 7: Power ON.

