PHILIPS

Installation Guide

UniversalFit

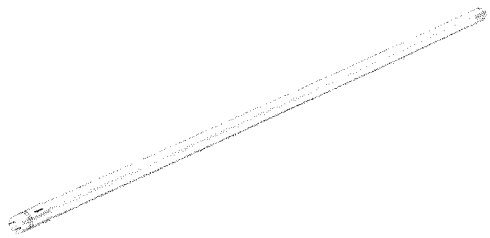

The Installation Guide contains important information and notes regarding the installation and operation of the UniversalFit lamps. Please note the important points below:

- Not compatible with luminaires that use a remote starter.
- Modifications to the product void the warranty.
- Suitable to replace fluorescent lamps as specified on the product label.
- Must be installed with ballast which is listed in Philips TLED compatible ballast list.
- Please refer to www.philips.com/instantfit for latest ballast compatibility guide.

Le Guide d'installation comporte des informations et des notes importantes relativement à l'installation et au fonctionnement des lampes UniversalFit. Veuillez noter les éléments importants ci-dessous :

- N'est pas compatible avec les luminaires qui utilisent un starter séparé.
- Les modifications au produit annulent la garantie.
- Convient pour remplacer les lampes fluorescentes comme le précise l'étiquette du produit.
- L'installation exige un ballast à allumage instantané répertorié dans la liste des ballasts compatibles avec les lampes TLED Philips.
- Pour accéder au guide le plus récent sur la compatibilité des ballasts, veuillez visiter le site www.philips.com/instantfit.

For Philips UniversalFit LED Lamps



1 2 Fluorescent 3 Fluorescent 4 LED UniversalFit 5 LED UniversalFit 6

LISTED

See reverse side for installation instructions.
Pour accéder aux instructions d'installation, se reporter au verso.

Philips UniversalFit LED Lamps

Instructions
1. Switch-off power to the luminaire
2. Remove diffuser (if provided)
3. Remove the existing fluorescent lamps from the luminaire.
   - Note: Verify the fluorescent tube type is listed on the label of Philips UniversalFit LED lamp.
4. Install the Philips UniversalFit LED lamp (one for each fluorescent lamp removed[1], ensure pins are firmly seated in the lamp holders).
5. Replace diffuser (if removed in step 2).
6. Switch on power to the luminaire.

Instructions
1. Couper l'alimentation du luminaire.
2. Retirer le diffuseur (si inclus).
3. Retirer les lampes fluorescentes existantes du luminaire.
   - Note : S'assurer que le type de tube fluorescent remplacé correspond à celui indiqué sur l'étiquette de la lampe DEL UniversalFit Philips.
4. Installer la lampe DEL UniversalFit Philips (remplacer chaque lampe fluorescente retirée[1], vous assurer que les broches sont bien insérées dans les douilles).
5. Replacer le diffuseur (si retiré à l'étape 2).
6. Allumer l'interrupteur du luminaire.

CAUTION – IF THE LAMP OR LUMINAIRE EXHIBITS UNDESIRABLE OPERATION (BUZZING, FLICKERING, ETC.), IMMEDIATELY TURN OFF POWER, REMOVE LAMP FROM LUMINAIRE AND CONTACT THE MANUFACTURER

CAUTION – RISK OF FIRE. DO NOT INSTALL IN A PRE-HEAT LUMINAIRE

CAUTION – RISK OF FIRE. PERFORM A VISUAL INSPECTION TO ENSURE LAMPHOLDERS ARE NOT DAMAGED OR LOOSE. IF DAMAGED, CORRODED, CHARRED, BLACKENED, OR LOOSE, CONTACT A QUALIFIED ELECTRICIAN FOR PROPER REPLACEMENT.

THIS PRODUCT MAY CAUSE INTERFERENCE TO RADIO EQUIPMENT AND SHOULD NOT BE INSTALLED NEAR MARITIME SAFETY COMMUNICATIONS EQUIPMENT OR OTHER CRITICAL NAVIGATION OR COMMUNICATION EQUIPMENT OPERATING BETWEEN 0.45 – 30MHZ.

LAMPS MUST BE OPERATED WITHIN AN AMBIENT FIXTURE TEMPERATURE OF -4F (-20C) AND 113F (45C) TO ENSURE UL COMPLIANCE.

This Class A digital apparatus complies with Canadian ICES-005.

THIS DEVICE IS NOT INTENDED FOR USE WITH EMERGENCY EXITS or NOT FOR EMERGENCY LIGHTING.

[1](N-1) rule applies, meaning:
Minimum 3-lamps be replaced in a 4-lamps ballast.
Minimum 2-lamps be replaced in a 3-lamps ballast.

ATTENTION - SI LA LAMPE OU LE LUMINAIRE MONTRE DES SIGNES D'OPERATION INDESIRABLE (BRUIT, VIBRATION, CLIGNOTEMENT, ETC.), ALORS COUPER IMMÉDIATEMENT LE COURANT ET ENLÈVER LA LAMPE DE L'APPAREIL D'ÉCLAIRAGE ENTRER EN CONTACT AVEC LE FABRICANT

ATTENTION - RISQUE DE FEU. N'INSTALLEZ PAS CETTE LAMPE DANS UN APPAREIL D'ÉCLAIRAGE DE PRÉCHAUFFAGE

ATTENTION – RISQUE D'INCENDIE. INSPECTEZ VISUELLEMENT POUR VOUS ASSURER QUE LES CULOTS NE SONT PAS ENDOMMAGÉS OU DESSERRÉS. SI LES CULOTS SONT ENDOMMAGÉS, CORRODÉS, BRÛLÉS, NOIRCIS OU DESSERRÉS, VEUILLEZ CONTACTER UN ÉLECTRICIEN QUALITÉ POUR EFFECTUER UN REMPLACEMENT ADÉQUAT.

CE PRODUIT EST SUSCEPTIBLE DE CAUSER DE L'INTERFÉRENCE AVEC LES ÉQUIPEMENTS RADIO ET NE DEVRAIT PAS ÊTRE INSTALLÉ PRÈS DES APPAREILS DE COMMUNICATION DE SÉCURITÉ MARITIME OU TOUT AUTRE ÉQUIPEMENT DE COMMUNICATION OU DE LA NAVIGATION QUI FONCTIONNE À UNE BANDE ENTRE 0,45 ET 30 MHZ.

AFIN D'ASSURER L'HOMOLOGATION UL, L'EXPLOITATION DES DOIT ÊTRE EFFECTUÉE À UNE TEMPÉRATURE AMBIANTE DU LUMINAIRE ENTRE -20C (-4F) ET 45C (113F).

Cet appareil numérique de la classe A est conforme à la norme NMB 005 du Canada.

NE CONVIENT PAS AUX SORTIES DE SECOURS

[1](N-1) La règle s'applique, se qui signifie :
Un minimum de 3 lampes doit être remplacé dans un ballast de 4 lampes.
Un minimum de 2 lampes doit être remplacé dans un ballast de 3 lampes.

© 2018 Signify Holding

Signify

Signify reserves the right to make changes in specifications and/or to discontinue any product at any time without notice or obligation and will not be liable for any consequences resulting from the use of this publication.

09/2018 www.philips.com/lighting

Signify North America Corporation
200 Franklin Square Drive
Somerset, NJ 08873, USA
Tel. 855-486-2216

Signify Canada Ltd./Signify Canada Ltée.
281 Hillmount Road,
Markham, ON, Canada L6C 2S3
Tel. 800-668-9008

3241 653 18511

