


# TP178 & TP179 Instructions

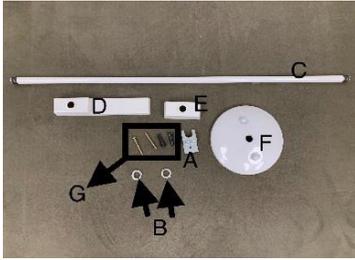

Included in this kit:


- A. T-Bar Clip
- B. 2 lock nuts
- C. 24" threaded rod
- D. Cover for Live End
- E. Cover for non wired end
- F. Canopy and Mounting Hardware
- G. Screws and Ceiling Anchors

Step 1




Remove mounting hardware from Part F and attach to Junction box. Use Part G if necessary. Then re-attach Part F to the the Mounting Hardware after running your wire (not provided) through the canopy.

Step 2

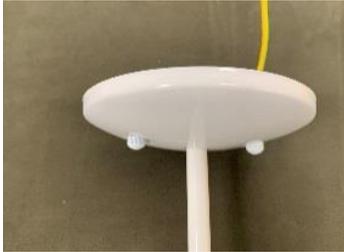


Attach Part C to Part F making sure to run your wires down through Part C

Step 3

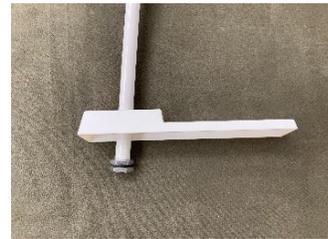

Slide Part C through the hole in Part D and Thread Part B on to the end of Part C Leaving a gap between them as shown in the picture

Step 4

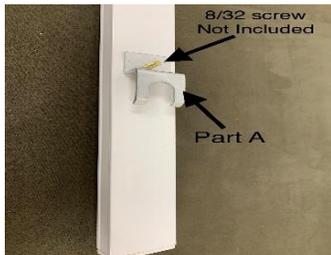

Attach Part A to the back of the track using a 1/2" long or less 8/32 screw (not included)

Step 5



Secure Part C to Part A by tightening the locknuts (Part B)

Step 6



Install the Live End Connector and wire through the knockout then slide the cover (Part D) down to cover up the knockout. Then repeat instructions for the other end of the track.